



clever
BATHROOM & KITCHEN TAPS

REF: 62145

DESCRIPTION: Single-lever sink mixer with aerator, swivel tube spout and flexible hoses 3/8" >350mm.

SERIES: GO!2

RANGE: STYLES BASIC


EAN: 8425144270690

REGULATION: UNE 19703, UNE-EN 817

PRODUCT IMAGE:



TECHNICAL DRAWING:

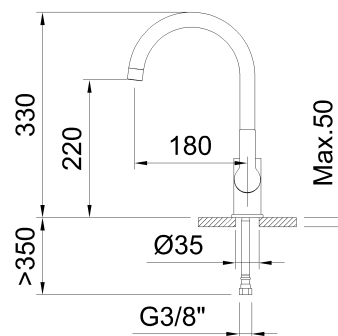

FINISH:



Matt black

WARRANTY:



CERTIFICATIONS:



SPARE PARTS:




61216
Aerator




62147
Handle




62148
Base



62149
Spout



96205
Ceramic cartridge
35



98772
Easyfix

TECHNOLOGIES:



Easytaps installation

This exploded view diagram illustrates the components of a kitchen faucet assembly, numbered 1 through 19:

- 1:** O-ring for the spout.
- 2:** Nut for the spout.
- 3:** Spout cap.
- 4:** The main curved spout.
- 5:** Threaded stem for the base.
- 6:** Compression nut and O-ring for the base connection.
- 7:** The main faucet body (cartridge housing).
- 8:** O-ring for the handle connection.
- 9:** O-ring for the base connection.
- 10:** The main faucet body (cartridge housing).
- 11:** O-ring for the base connection.
- 12:** The main faucet body (cartridge housing).
- 13:** Hot water indicator (red dot).
- 14:** Cold water indicator (blue dot).
- 15:** Hot water indicator (red dot).
- 16:** Cold water indicator (blue dot).
- 17:** The main faucet body (cartridge housing).
- 18:** Two 3/8" long tubes for the hot and cold water supply.
- 19:** The main faucet body (cartridge housing).

- This tap is designed exclusively for the supply of drinking water. Do not use it for any other liquids or substances that could compromise its safety or functionality.
- Always follow the installation, usage, and maintenance instructions provided by Standard Hidráulica, S.A.U.
- Before installation, ensure that the pipework is clean and free from debris that could affect the tap's performance.
- Use appropriate tools during installation to avoid damaging the tap. Do not over-tighten fittings, as this may cause mechanical failure and/or leaks.
- Adjust the hot water temperature to prevent burns. Be aware that the tap body may become hot during use, posing a risk of burns upon contact.
- Do not leave the tap running unattended to prevent overflows and unnecessary water wastage.
- Operate the tap only within the pressure and temperature limits specified by Standard Hidráulica, S.A.U. Using it outside these parameters may lead to damage or reduce the product's lifespan. If the mains water pressure is high, it is advisable to install a pressure-reducing valve to protect the tap from excessive strain.
- Before installing, handling, or dismantling the tap, close the shut-off valve and release any residual water pressure.
- Periodically inspect all connections and O-rings for leaks or signs of wear and replace components if necessary.
- For repairs, use only original spare parts recommended by Standard Hidráulica, S.A.U. to ensure compatibility and reliability.
- The tap contains small components. Keep them out of the reach of young children to eliminate choking hazards.
- Avoid using aggressive or abrasive cleaning agents, as these may damage the tap's surface finish or internal components.
- After installation, dispose of the packaging responsibly in accordance with local waste disposal regulations.
- At the end of the tap's service life, recycle or dispose of it in accordance with local regulations governing metal and plastic waste.